

GOLDEN AXE (833-7001-~)

COIN/CREDIT OPTION SWITCH SETTING


DIP SW #1

OPTION		1	2	3	4	5	6	7	8
1 COIN	1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN	2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN	3 CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 COIN	4 CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN	5 CREDITS	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF
1 COIN	6 CREDITS	ON	OFF	ON	OFF	OFF	ON	ON	OFF
2 COINS	1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COINS	1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COINS	1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
2 COINS	3 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COINS	1 CREDIT	-	-	-	-	-	-	-	-
4 COINS	2 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
5 COINS	3 CREDITS	-	-	-	-	-	-	-	-
6 COINS	4 CREDITS	-	-	-	-	-	-	-	-
1 COIN	1 CREDIT	-	-	-	-	-	-	-	-
2 COINS	2 CREDITS	-	-	-	-	-	-	-	-
3 COINS	3 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COINS	4 CREDITS	-	-	-	-	-	-	-	-
5 COINS	5 CREDITS	-	-	-	-	-	-	-	-
1 COIN	1 CREDIT	ON	OFF	ON	ON	ON	OFF	ON	ON
2 COINS	2 CREDITS	-	-	-	-	-	-	-	-
3 COINS	3 CREDITS	-	-	-	-	-	-	-	-
4 COINS	5 CREDITS	-	-	-	-	-	-	-	-
1 COIN	1 CREDIT	OFF	ON	ON	ON	OFF	ON	ON	ON
2 COINS	3 CREDITS	-	-	-	-	-	-	-	-
FREE PLAY		ON	ON	ON	ON	ON	ON	ON	ON
		COIN SW #1				COIN SW #2			

OPTION SWITCH SETTING

DIP SW #2

OPTION		1	2	3	4	5	6	7	8
1 CREDIT TO START		OFF							
2 CREDITS TO START		ON							
ADVERTISE SOUNO	OFF		OFF						
	ON		ON						
GAME DIFFICULTY	HARDEST			ON	OFF	ON	OFF		
	HAROE			ON	OFF	OFF	OFF		
	HARD			OFF	OFF	ON	OFF		
	NORMAL			OFF	OFF	OFF	OFF		
	EASY			OFF	OFF	OFF	ON		
	EASIER			OFF	ON	OFF	OFF		
	EASIEST			OFF	ON	OFF	ON		
	SPECIAL			ON	ON	ON	ON		
NOT USED								OFF	OFF

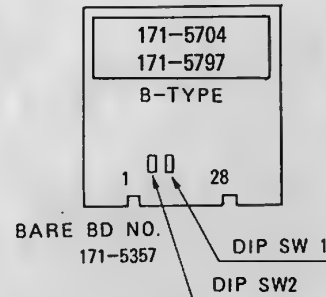

MONITOR
(ヨコ)
HORIZONTAL

GAME DIFFICULTY

	NUMBER OF PLAYERS	PLAYER METER
HARDEST	1	2
HAROE	1	3
HARD	2	2
NORMAL	2	3
EASY	2	4
EASIER	3	3
EASIEST	3	4
SPECIAL	5	5


PIN ASSIGNMENT

COMPONENT SIDE

SOLDER SIDE

GND	1	A	GND
GND	2	B	GND
+5V	3	C	+5V
+5V	4	D	+5V
+12V	5	E	+12V
COIN METER 1	6	F	COIN METER 2
(NOT USED)	7	H	(NOT USED)
1P MAGIC	8	J	2P MAGIC
1P ATTACK	9	K	2P ATTACK
1P JUMP	10	L	2P JUMP
(NOT USED)	11	M	(NOT USED)
1P DOWN	12	N	2P DOWN
1P UP	13	P	2P UP
1P RIGHT	14	R	2P RIGHT
1P LEFT	15	S	2P LEFT
(NOT USED)	16	T	(NOT USED)
(NOT USED)	17	U	(NOT USED)
(NOT USED)	18	V	(NOT USED)
(NOT USED)	19	W	(NOT USED)
COIN 1	20	X	1P START
COIN 2	21	Y	2P START
TEST	22	Z	(NOT USED)
SERVICE	23	a	(NOT USED)
SPEAKER(+)	24	b	SPEAKER(-)
RED	25	c	GREEN
BLUE	26	d	CMP. SYNC
GND	27	e	GND
GND	28	f	GND

56P P:3.96mm

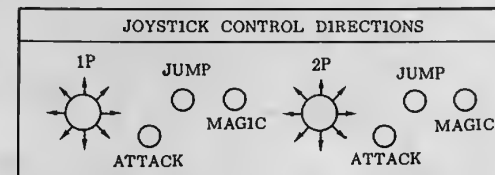

421-7442

GOLDEN AXE

SOLDIER SIDE	NO.	PARTS SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
	5	
+12V	6	+12V
	7	
	8	
	9	
SP (-)	10	SP (+)
	11	
VIDEO GREEN	12	VIDEO RED
VIDEO SYNC	13	VIDEO BLUE
SERVICE	14	VIDEO GND
	15	
COIN 2	16	COIN 1
2P START	17	IP START
2P UP	18	IP UP
2P DOWN	19	IP DOWN
2P LEFT	20	IP LEFT
2P RIGHT	21	IP RIGHT
SH SW 1	22	IP PUSH SW 1
SH SW 2	23	IP PUSH SW 2
SH SW 3	24	IP PUSH SW 3
	25	
	26	
GND	27	GND
GND	28	GND

COIN/CREDIT OPTION SWITCH SETTING						DIP SW #1			
OPTION		8	7	3	4	5	6	7	A
1 COIN	1 CREDIT	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
1 COIN	2 CREDITS	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
1 COIN	3 CREDITS	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
1 COIN	4 CREDITS	ON	ON	OFF	OFF	ON	ON	OFF	OFF
1 COIN	5 CREDITS	OFF	OFF	ON	OFF	OFF	ON	ON	OFF
1 COIN	6 CREDITS	ON	OFF	ON	OFF	ON	OFF	ON	OFF
2 COINS	1 CREDIT	OFF	ON	ON	OFF	OFF	ON	ON	OFF
3 COINS	1 CREDIT	ON	ON	ON	OFF	ON	ON	ON	OFF
4 COINS	1 CREDIT	OFF	OFF	OFF	ON	OFF	OFF	OFF	ON
2 COINS	3 CREDITS	ON	OFF	OFF	ON	ON	OFF	OFF	ON
2 COINS	1 CREDIT								
4 COINS	3 CREDITS								
5 COINS	3 CREDITS	OFF	ON	OFF	ON	OFF	ON	OFF	ON
6 COINS	4 CREDITS								
2 COINS	1 CREDIT	ON	ON	OFF	ON	ON	OFF	ON	
4 COINS	3 CREDITS								
1 COIN	1 CREDIT								
2 COINS	2 CREDITS								
3 COINS	3 CREDITS	OFF	OFF	ON	ON	OFF	OFF	ON	ON
4 COINS	4 CREDITS								
5 COINS	5 CREDITS								
1 COIN	1 CREDIT								
2 COINS	2 CREDITS	ON	OFF	ON	ON	ON	OFF	ON	ON
3 COINS	3 CREDITS								
4 COINS	5 CREDITS								
1 COIN	1 CREDIT	OFF	ON	ON	ON	OFF	ON	ON	ON
2 COINS	1 CREDITS								
FREE PLAY		ON	ON	ON	ON	ON	ON	ON	ON
		COIN SW #1				COIN SW #2			

[illegible]